





Web Argentina



Web Uruguay



Web Paraguay

Introduction





Zhejiang Sealand Technology Co., Ltd. is a professional hi-tech enterprise, founded in 2009 with 45 million CNY registered capital. Located in Binhai ETDZ, Wenzhou, the factory covers an area of 4000m*, equipped with advanced production and test facilities.

Sealand started to research oil and gas equipment in 1990 first, and then focuses on the research, development, production, sale and service of mass flow meter. After decades of effort, it learned the core technology and manufacturing technique in this area; the products reach domestic leading level, and meet the international standards. Difficulty has been solved to measure fluid (liquid/gas) at high/low temperature, at a low flow rate and at a large pressure fluctuation, meeting the need for quick-acting and high accuracy in the market. Besides, solution is available for special requirements, including design, installation, test & other services.

As a technology enterprise, Sealand communicates and cooperates with colleges and research institutes to keep technology updated. In the meantime, it concentrates on quality management as well, and obtained ATEX, CE, Certificate of Quality System ISO9001,ISO14000, ISO18000, Certificate of Explosion-proof and Certificate of Metrology.

Sealand is looking forward to establishing a long-term cooperation with you and create a bright future together!











-1-

Main Parameters



| Model | Diameter (mm) | Max.flow (kg/min) | Max.working pressure (MPa) | Accuracy grade | Zero stability (kg/h) |
|--------|------------------|----------------------|----------------------------------|-------------------|--------------------------|
| CG-06 | 6 | 18 | 4 | 0.1, 0.2 | 0.04 |
| CG-15 | 15 | 50 | 25 | 0.1, 0.2 | 0.12 |
| CNG-15 | 15 | 70 | 25 | 0.1, 0.2 | 0.19 |
| CNG-20 | 20 | 120 | 25 | 0.1, 0.2 | 0.36 |
| CG-25 | 25 | 200 | 4 | 0.1, 0.2 | 0.62 |
| CG-40 | 40 | 500 | 4 | 0.1, 0.2 | 1.6 |
| CG-50 | 50 | 1000 | 4 | 0.1, 0.2 | 2.38 |
| CG-80 | 80 | 3000 | 4 | 0.1, 0.2 | 7.05 |



Calibration Lab Uncertainty: \pm 0.05%

Production & Testing Equipment









Testing equipment

Burn-in area







CNC pipe bending machine



Assembly line



Vacuum brazing furnace

-3-



Introduction



Mass flow meter is a device that measures the mass of a fluid traveling through a tube, in accordance with Coriolis Principle. Coriolis mass flow meter can directly measure fluid mass flow, and has great influence on processing and measuring methods in energy & chemical industries. Compared with traditional volumetric flow measurement, it has following advantages:

- 1. High accuracy: Generally from 0.1% 0.5%.
- 2. Wide application: Besides common fluid, mass flow meter can measure fluids such as non-Newtonian fluid, all kinds of slurry, suspensions, etc.
- 3. Convenient installation: No specific requirement of choosing upstream or downstream pipe.
- 4. High reliability



maintenance, because of no movable parts.



Not affected by the fluid. saving design & installation cost.






One sensor can be used for various fluids.

Flow Sensor



Flow sensor is a phase-sensitive resonant sensor based on Coriolis effect. composed of vibration tube, signal detector, concussion driver, structural support housing.

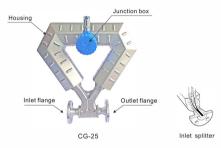

Flow Transmitter



Flow transmitter is a micro-programming-centered electronic system, supplying driving force to sensor, transforming sensor signal into mass flow signal, and improving measurement accuracy in accordance with temperature parameter.

It is composed of switching power supplier, safety grating, core processor board, display module, etc. installed in a ex-proof junction box. Switching power supply offers power for transmitter; safe grating isolates flow sensor and transmitter intrinsically; core processor detects & processes sensor phase signal, sends mass flow signal and processes communication



Installation



A.Installation of sensor

The installation can be adjusted to local conditions, because the meter measures mass flow directly, the accuracy is not influenced by fluid, and there is no straight pipeline requirement.

- > 2 pipelines should be in the same horizon and centered:
- > Pipe flanges should be perpendicular to the pipe:
- > Both pipelines should be be fixed near pipe flanges;
- > Bolt holes of pipe flange and sensor flange should be aligned;
- The fluid direction should be the same as marked on sensor.





-

- ➤ Easy for operation and to check the data
- ➤ Avoid direct sunlight
- ➤ Standard ambient temperature & ex-proof
- > Keep away from strong electromagnetic interference devices
- > Use specified power supply

b. Installation of transmitter

c. Installation for different fluids



Note: It's better to adopt vertical installation if the medium contains liquid/slurry


Mass Flow Meter CG-06





| Model No. | CG-06 |
|--------------------|-----------------------------|
| Nominal diameter | 6mm |
| Max. flow rate | 18 kg/min |
| Liquid accuracy | ±0.1% (rangeability 1:10) |
| | ±0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | ±1°C ±0.5% of reading |
| Density accuracy | ±0.002g/cm3 |
| Zero stability | 0.04kg/h |
| Repeatability | 0.05% |
| MWP. | 4MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | DN15 Flange, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 410*385*250mm |
| G.W. | 8.6kgs |



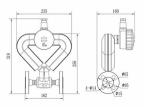


-7-


Mass Flow Meter CG-15



| Model No. | CG-15 |
|--------------------|-----------------------------|
| Nominal diameter | 15mm |
| Max. flow rate | 50 kg/min |
| Liquid accuracy | ±0.1% (rangeability 1:10) |
| | ±0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | ±1°C ±0.5% of reading |
| Density accuracy | ±0.002g/cm3 |
| Zero stability | 0.12kg/h |
| Repeatability | 0.05% |
| MWP. | 25MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | Nut 32X1.5, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 445*370*405mm |
| G.W. | 12 kgs |



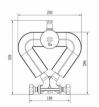

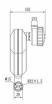


Mass Flow Meter CNG-15





| Model No. | CNG-15 |
|--------------------|-----------------------------|
| Nominal diameter | 15mm |
| Max. flow rate | 70 kg/min |
| Liquid accuracy | ±0.1% (rangeability 1:10) |
| | ±0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | ±1°C ±0.5% of reading |
| Density accuracy | ±0.002g/cm3 |
| Zero stability | 0.19kg/h |
| Repeatability | 0.05% |
| MWP. | 25MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | Nut 32X1.5, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 575*320*185mm |
| G.W. | 14 kgs |



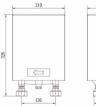




Mass Flow Meter CNG-20

| Model No. | CNG-20 |
|--------------------|---------------------------------|
| Nominal diameter | 20mm |
| Max. flow rate | 120kg/min |
| Liquid accuracy | \pm 0.1% (rangeability 1:10) |
| | \pm 0.2% (rangeability 1:20) |
| Gas accuracy | $\pm 0.5\%$ |
| Temp. accuracy | \pm 1°C \pm 0.5% of reading |
| Density accuracy | \pm 0.002g/cm3 |
| Zero stability | 0.36kg/h |
| Repeatability | 0.05% |
| MWP. | 25MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | Nut M42X2, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 650*430*240mm |
| G.W. | 21 kgs |



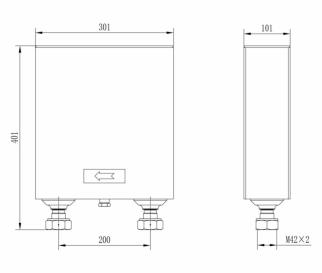


Mass Flow Meter CG-25





| Model No. | CG-25 |
|--------------------|---------------------------------|
| Nominal diameter | 25mm |
| Max. flow rate | 200 kg/min |
| Liquid accuracy | \pm 0.1% (rangeability 1:10) |
| | \pm 0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | \pm 1°C \pm 0.5% of reading |
| Density accuracy | \pm 0.002g/cm3 |
| Zero stability | 0.62kg/h |
| Repeatability | 0.05% |
| MWP. | 4MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | DN25 flange, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | ⓑ II 2G Ex db IIC T6T1 Gb |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 665*660*315mm |
| G.W. | 23 kgs |



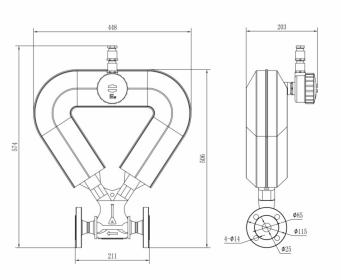


-11- -12-

Mass Flow Meter CG-40



| Model No. | CG-40 |
|--------------------|-----------------------------|
| Nominal diameter | 40mm |
| Max. flow rate | 500kg/min |
| Liquid accuracy | ±0.1% (rangeability 1:10) |
| | ±0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | ±1°C ±0.5% of reading |
| Density accuracy | ±0.002g/cm3 |
| Zero stability | 1.6kg/h |
| Repeatability | 0.05% |
| MWP. | 4MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | DN40 flange, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 845*740*450mm |
| G.W. | 45 kgs |



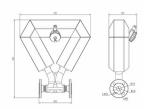

Mass Flow Meter CG-50






| Model No. | CG-50 |
|--------------------|-----------------------------|
| Nominal diameter | 50mm |
| Max. flow rate | 1000 kg/min |
| Liquid accuracy | ±0.1% (rangeability 1:10) |
| | ±0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | ±1°C ±0.5% of reading |
| Density accuracy | ±0.002g/cm3 |
| Zero stability | 2.38kg/h |
| Repeatability | 0.05% |
| MWP. | 4MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | DN50 flange, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 870*740*440mm |

75 kgs



G.W.

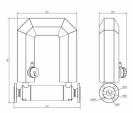

Mass Flow Meter CG-80



| Model No. | CG-80 |
|--------------------|-----------------------------|
| Nominal diameter | 80mm |
| Max. flow rate | 3000kg/min |
| Liquid accuracy | ±0.1% (rangeability 1:10) |
| | ±0.2% (rangeability 1:20) |
| Gas accuracy | ±0.5% |
| Temp. accuracy | ±1°C ±0.5% of reading |
| Density accuracy | ±0.002g/cm3 |
| Zero stability | 7.05kg/h |
| Repeatability | 0.05% |
| MWP. | 4MPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Ingress protection | IP67 |
| Fluid temperature | -200~+200°C |
| Operating temp. | -30°C~+60°C |
| Vibrating tube | Stainless steel 316L |
| End connection | DN80 flange, customizable |
| Output | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |
| Warranty | 2-year |
| Certificate | CE, ATEX |
| Package size | 1060*860*490mm |
| G.W. | 134 kgs |








Microbend



BlueFlow Fluid Flow Solutions

Sealand microbend version is on the way!

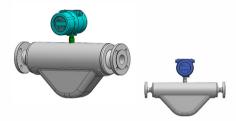

Transmitter F231



Specifications

| Operating temp. | -30°C~+60°C |
|----------------------|-----------------------------|
| RH | ≤95%, non condensing |
| Atmospheric Pressure | 86~106 kPa |
| Operating voltage | AC85~265V/ DC12~24V |
| Communication port | RS485, Pulse, 4-20mA & HART |
| Ex-mark | |



-15--16-



Application Scope 6



Mass flow meter can be applied to the following industries.

- ➤ Alternative Energy
- > Oil & Gas
- ➤ Chemical
- > Food & Beverage
- ➤ Industrial Energy
- ➤ Marine > Power
- > Pulp & Paper
- > Refining
- > Others















CERTIFICATES







CE



Ex-proof



ISO 14001:2015



ISO 9001:2015



ISO 18001:2007



Web Argentina

Web Uruguay

Web Paraguay