



Compact indoor air quality monitor. Featuring highly precise fine dust measurement, Palas® Air Quality and Infection Risk Index.

## Description



Fig. 1: AQ Guard AQ Guard is currently the most advanced compact aerosol spectrometer for determining pollution by particulates in indoor air. Using the same measurement system and sophisticated algorithms as the EN 16450 certified Fidas® 200 it analyses continuously, reliably, and precisely airborne fine dust particles in the range 175 nm – 20 µm. The "ambient" version (with heated aerosol inlet) achieves precision comparable to type approved analyzers, which makes AQ Guard stand out compared to similar devices.

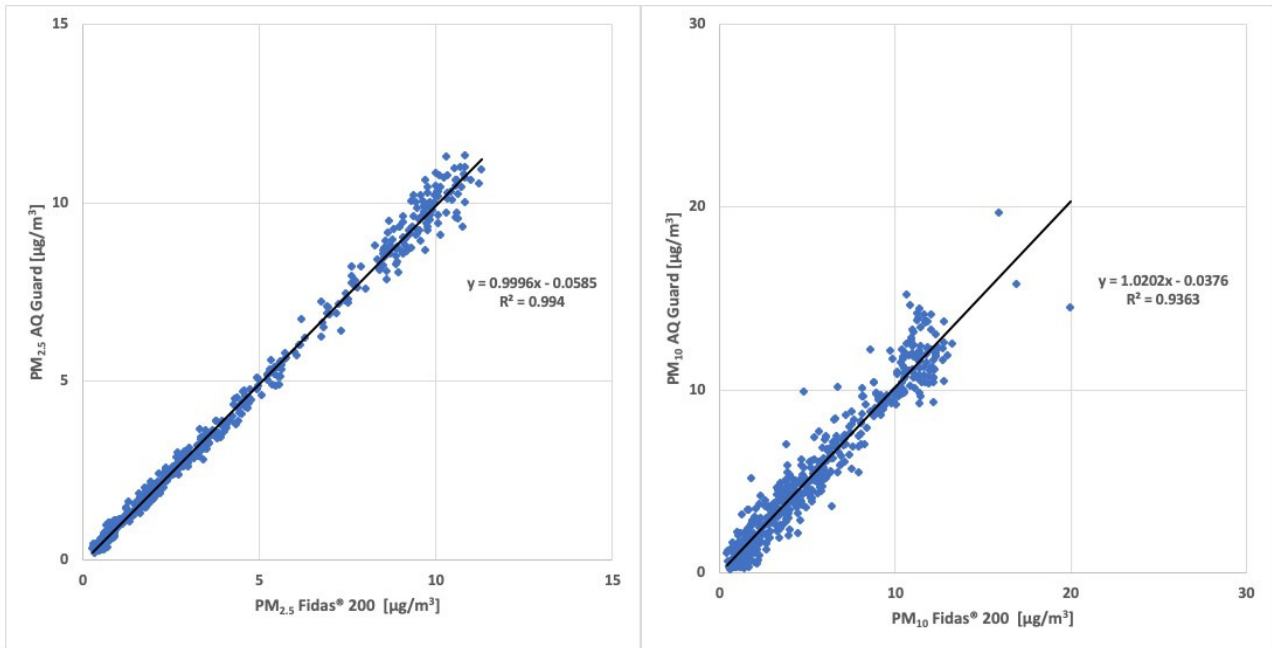


Fig. 2: Comparison of data recorded by AQ Guard ambient and Fidas® 200 S. Besides the PM<sub>10</sub> and PM<sub>2.5</sub> fine dust fractions, relevant for regulatory immission control, AQ Guard simultaneously calculates and records PM<sub>1</sub>, PM<sub>4</sub>, the total dust load, the particle number concentration C<sub>n</sub> as well as the particle size distribution. AQ Guard thus provides precise and comprehensive information about particulates as only a single particle counting and sizing device can. AQ Guard is designed for unattended, continuous operation and features an extraordinarily durable sampling gas blower. Aerosol sampling as well as optical sensor system resist staining but can be cleaned, if necessary, by the user. Exceptional long term stability of the measuring system is achieved by automatic calibration tracking and allows up to two years of operation without recalibration. Calibration status can be checked, using a test powder calibrated by Palas®. This makes Palas® aerosol spectrometers the only optical fine dust monitors which can be user calibrated with a traceable standard on site.

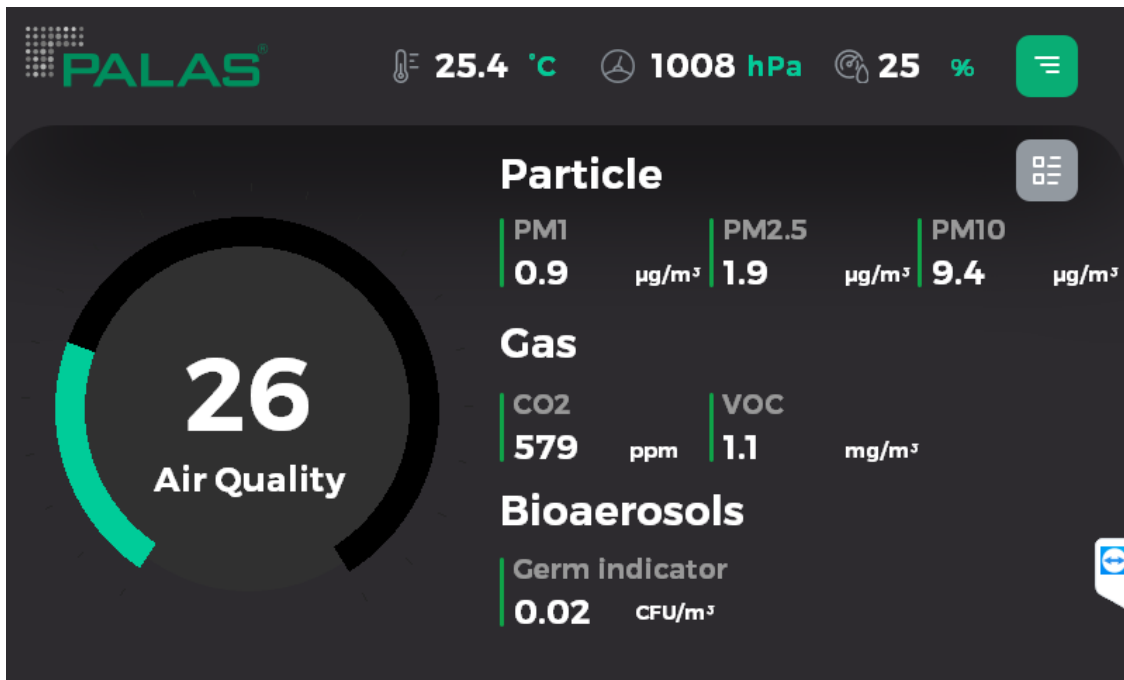


Fig. 3: AQ Guard screen view Auxiliary sensors for CO<sub>2</sub> and volatile organic carbohydrates (VOC) built into AQ Guard provide data for calculating an indoor air quality index (AQI) according to the European model. AQ Guard also records air temperature, pressure and relative humidity.

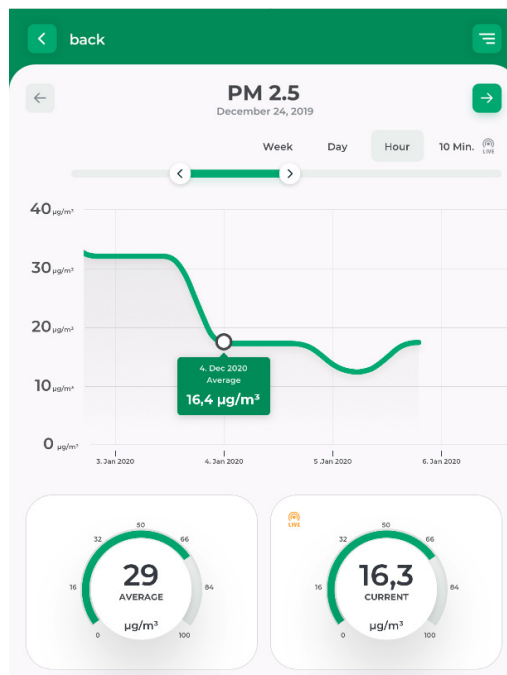


Fig. 4: Web interface AQ Guard features fast data interfaces and allows real time access over Ethernet, WiFi or cellular network. Since all results are calculated and recorded within the analyzer it requires no external data processing by, e.g., cloud computing. Users retain full control over their data and decide over information access. AQ Guard can provide numerical

# AQ Guard



data, using various communication protocols, as well as visualize information on any type of device using a modern web interface. design and optional power supply on the Ethernet port (PoE) simplifies installation in buildings and integration in an existing infrastructure.

## Benefits

- Technology based on the type approved Fidas® 200 series (EN16450 and MCERTS); simultaneous measurement of C<sub>n</sub>, PM<sub>1</sub>, PM<sub>2.5</sub>, PM<sub>4</sub>, PM<sub>10</sub>
- Computation of air quality index based on measurements of particulates, CO<sub>2</sub>, and VOC
- High accuracy due to advanced algorithms
- Long term stable due to self calibration for measurement of flow rate, particulates, and gaseous pollutants
- 2 years operation without calibration
- Operates on AC, DC, or power-over-Ethernet

## Datasheet

<i>Parameter</i>	<i>Description</i>
<b>Interfaces</b>	USB, Ethernet, Wi-Fi, optional: UMTS
<b>Measurement range (size)</b>	0.175 – 20 µm
<b>Size channels</b>	128 (64/decade)
<b>Measuring principle</b>	Single particle optical light scattering with evaluation of signal duration and shape, advanced mass conversion algorithm
<b>Measurement range (number C<sub>N</sub>)</b>	0 – 20,000 particles/cm <sup>3</sup>
<b>Volume flow</b>	1.0 l/min $\hat{=}$ 0.06 m <sup>3</sup> /h
<b>Data acquisition</b>	Digital, 22 MHz processor, 256 raw data channels
<b>Light source</b>	Long term stable LED
<b>Power consumption</b>	< 15 W
<b>User interface</b>	Touchscreen 800 • 480 Pixel, 5" ( 12,7cm )
<b>Dimensions</b>	175 • 280 • 140 mm ( H • W • D )
<b>Weight</b>	2.4 kg
<b>Operating system</b>	Windows 10 IoT Enterprise
<b>Data logger storage</b>	10 GB
<b>Software</b>	PDAnalyze
<b>Response time</b>	1 s
<b>Aerosol conditioning</b>	Optional: thermal with compact IADS
<b>Measurement range (mass)</b>	0 – 20,000 µg/m <sup>3</sup>
<b>Reported data</b>	PM <sub>1</sub> , PM <sub>2.5</sub> , PM <sub>4</sub> , PM <sub>10</sub> , TSP, C <sub>N</sub> , Partikelgrößenverteilung, Druck, Temperatur, Feuchte, CO <sub>2</sub> , TVOC, Keimindikator, Infection Risk Index, Air Quality Index
<b>Installation conditions</b>	-20 – +50 °C
<b>Linearity</b>	0.95 – 1.05 (measured against EN16450 certified Fidas® 200)
<b>Accuracy</b>	R2 > 0,98 for PM2.5 and R2 > 0,94 for PM10 versus EN16450-certified Fidas® 200 (15 min average, each)

## Applications

- Industry:
  - Production processes
  - Bulk material handling (mixing, discharge, storage, packaging etc.)
  - Fenceline Monitoring
- Construction sites: Roads, railroads, demolition sites
- Buildings: Schools, kindergartens, hospitals, hotels, offices, public service buildings
- Residential buildings near construction sites or other polluted areas
- Public transportation: Airports, train stations, tramway underground stations, cruise ships, passenger cabin, e.g. in tram, train

## DASTEC S.R.L.

**Representantes / Distribuidores Exclusivos**

 **Argentina**

Tel: (+54 11) 5352 2500

Email: [info@dastecsrl.com.ar](mailto:info@dastecsrl.com.ar)

Web: [www.dastecsrl.com.ar](http://www.dastecsrl.com.ar)

### Palas GmbH

Partikel- und Lasermesstechnik

Greschbachstrasse 3 b

76229 Karlsruhe

Germany

### Managing Partner:

Dr.-Ing. Maximilian Weiß, Dr. Daniel Auer

### Commercial Register:

register court: Mannheim

company registration number: HRB 103813

USt-Id: DE143585902



**Contact:** E-Mail: [mail@palas.de](mailto:mail@palas.de)

Internet: [www.palas.de](http://www.palas.de)

Tel: +49 (0)721 96213-0

Fax: +49 (0)721 96213-33